Woxter Tablet PC

(Android4.0)

manual de usuario

user guide

www.woxter.com

Índice

Indice 1
Precauciones de uso 2
2 Uso de la tecla de encendido 3
3 Pantalla táctil 3
4 Transferencia de datos 3
5 Uso de la terjeta TF 4
6 Para empezar 4
Carga de la batería 4
Uso de la batería 4
Apagar el dispositivo 5
Ajustes de conexiónWi-Fi 5
Ajustes de conexión 3G 5
7 Escritorio 6
8 Bloqueo de la pantalla 7
9 Progamas 8
Download and install software 9
10 Desk meue functions 10
11 Aplicaciones 10
Instalar programas 10
Deacarga directa de programas 10
Conexión a un ordenador 11
Desinstalar programas 11
12 Grabación 12
13 Reloj 12
Alarma 13
14 Descaragr e instalar programas 14
15 Buscador 14
16 Calendario 15
Citas 15
17 Cámara 15
Tomar fotos 15
Grabar vídeos 16
18 Calculadora 16
19 E-mail 17

20 Gestor de archivos 19
Copiar archivos desde el PC o el dispositivo..... 19
Borrar archivos 20
21 Mi música 20
Reproductor 20
22 Mis vídeos 21
23 Galería de imágenes 21
24 Mapas 22
25 Búsquedas locales 22
26 Tienda elctrónica 22
27 Ajustes 23
Accesorios y notas de seguridad 24

Precauciones de uso

Al utilizar el equipo por favor obedezca las siguientes cuestiones básicas de seguridad que requieren su atención. Esto reducirá los riesgos de incendios, descargas eléctricas y de lesión.

- No deje que el producto se moja con la lluvia o se humedezca.
- Por favor, mantenga el dispositivo alejado de la luz solar directa y las fuentes de calor
- Proteja el cable de alimentación. Cuando se conecta el cable de alimentación, por favor, no deje en lugares donde se puedan pisar, evitar que este sea presionado o estirado. Preste especial atención a la protección del conector del equipo.
- Por favor, use el adaptador de corriente para las cargas, con otro cargador puede causar daños
- No desmonte el equipo o intente repararlo usted mismo.

Limpieza del dispositivo

Use un paño seco para limpiar las huellas o suciedades de la pantalla, no use disolventes ni productos químicos.

2 Uso del botón de encendido

Encender: Pulse el botón durante tres segundos.
Apagar: Pulse el botón durante tres segundos, apagar y confirmar.
Apagar y encender pantalla : pulse suavemente para encender la pantalla.
Obligar apagado: Si su dispositivo se bloques o no responde mantenga pulsado el botón durante un periodo de 6 segundos.
Tecla de reinicio: Pulse sobre la tecla "reset" para reiniciar su dispositivo.

3 Pantalla táctil

1 De acuerdo con las instrucciones siguientes, aprenda a utilizar la pantalla táctil.
2 Haga clic en el icono opcional en la pantalla de su elección.
3 Pulsación larga: elige un icono y pulsar más tiempo, puede arrastrar a continuación, mostrar el icono en el menú del escritorio.
4 Arrastrar: Los iconos se pueden poner en diferentes interfaces de pantalla arrastrando el icono entre los interfaces de pantalla diferentes.

☆ **Para proteger la pantalla, por favor no coloque ningún objeto encima de la superficie de la misma.**

4 Transferencia de datos

Antes de usar la función USB efectúe la conexión de los cables

Conexión OTG

Cable de datos USB

Disco de memoria

Conecte la unidad de almacenamiento, inserte el cable USB OTG en el puerto previsto. La unidad está lista para su uso.

5 Uso de la tarjeta TF

☆*Soporta tarjetas de memoria de hasta 32 Gb*

Inserte la memoria en la ranura de la tarjeta y la pantalla mostrará "tarjeta SD lista", cuando las palabras desaparecen, significa que la tarjeta del TF está lista para su uso.

Borrar datos de la tarjeta

Cierre todos los programas o documentos abiertos en la tarjeta. Pulse

→ ajustes → memoria interna y tarjeta TF → borrar tarjeta TF, presione el icono

donde desea borrar.

☆ *Para no dañar su tarjeta no la retire ni manipule si no es necesario .*

☆ Use tarjetas compatibles .

6 Para empezar

Carga de la batería

Inserte una parte del adaptador en el puerto previsto del dispositivo y el otro extremo en el adaptador, y este a la corriente. Mientras está en carga en su pantalla se mostrará el icono: cuando la batería esté totalmente cargada su pantalla mostrará l icono: .

☆*puede usar el cable USB para realizar cargas desde el ordenador.*

☆*Puede usar su dispositivo mientras está en carga, pero esto hará que la misma tarde mas.*

Uso de la batería

La batería no se encuentra plenamente cargada cuando se le entrega, le aconsejo que haga una carga completa de batería de 4 horas por lo menos antes de utilizar el dispositivo.

Duración de la batería recargable, por lo general dependen de los tiempos de carga y descarga. Sin embargo, también puede seguir las siguientes sugerencias para ampliar la capacidad de la batería:

- Utilice el dispositivo al menos una vez a la semana
- Regularmente cargue la batería por completo.
- No deje la batería mucho tiempo sin carga.
- Mantenga siempre el dispositivo y la batería lejos de fuentes de calor

Ajustes

Mantenga la tecla pulsada durante 5 segundos.

Ajustes de red Wi-Fi

Es necesario realizar algunos ajustes antes de poder usar la conexión Wi-Fi.

1. Pulse

→ ajustes → ajustes de red.

Elija activar la conexión Wi-Fi en el menú de ajustes.

Si la conexión es abierta podrá usarla directamente, si se muestra el icono necesitará introducir una contraseña.

2. Pulse sobre la conexión →introduzca la contraseña →pulse sobre el link.
3. Pulse la tecla para volver al escritorio.

☆*Si la red está oculta deberá hacer una búsqueda para poder acceder a ella.*

Ajustes 3 G

1. Antes de utilizar la red 3G asegúrese de tener instalada la tarjeta correcta, y efectúe los ajustes necesarios pulsando ajustes

→redes→ mas → la información de la red se mostrará como a continuación :

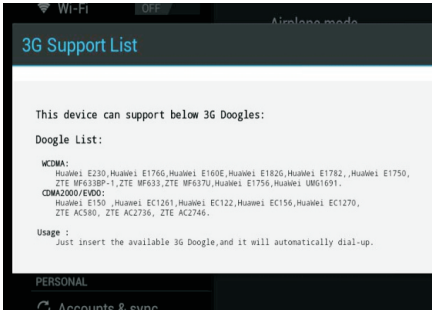

2. Una vez la tarjeta instalada conecte el cable USB al tablet.

3. Una vez conectada pulse

ajustes → redes →mas→ red móvil，para ajustar la red 3G.

7 Escritorio

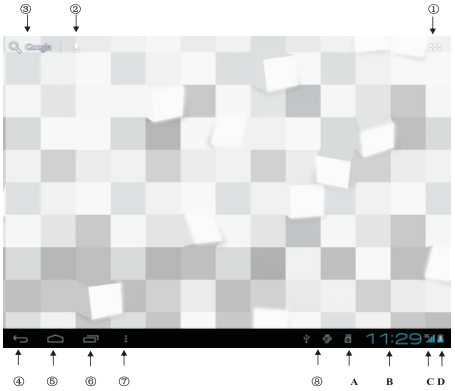

1：**Toque para ver las aplicaciones**
2：**Búsqueda de funciones por voz**
3：**Abrir buscador**
4：**Volver**
5：**Escritorio**
6：**Selección de páginas múltiples**
7：**Menú**
8：**Entrada USB**
A: Estado de conexión de tarjeta TF
B: Hora
C: Estado de conexión de 3G/WIFI
D: Estado de la batería

☆*Pulse sobre el icono del programa para abrirlo.*

☆*Mantenga pulsada la tecla arrastrar para mover los iconos en el escritorio。*

☆pulse sobre la tecla

para limpiar el escritorio.

8 Bloqueo de pantalla

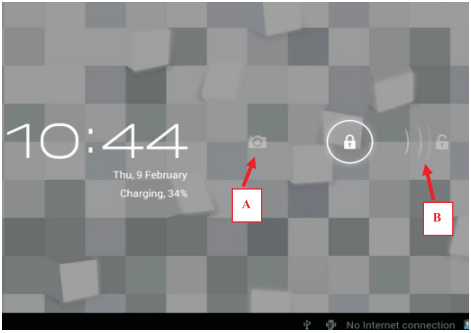

Si hace tiempo que no utiliza un dispositivo o el botón de pulsación corta de potencia, el dispositivo entrará en estado de espera. Hay dos estados: en primer lugar queda en espera, la pantalla del dispositivo está apagada, entonces deberá presionar el botón de encendido para entrar en la pantalla de espera, siguiendo la imagen de arriba, presione el botón de desbloqueo de color rojo se mostrarán los puntos A \ B como en la imagen de arriba, presione A para usar la cámara, presione B para liberar el resto de funciones y la pantalla.

9 Programas

	Grabadora	Graba los sonidos exteriores
	Reloj	Muestra la hora
	Descargas	Descargue e instale programas
	Navegador	Inicie su conexión a internet
	Calendario	Ajuste la fecha
	Cámara	Toma fotos y vídeos
	Calculadora	Efectúe operaciones simples

	Email	Envía y recibe correos electrónicos
	Gestor de archivos	Visualice y gestione sus archivos, instale aplicaciones Android y realice copias de seguridad en su tarjeta SD
	Música	Reproduce y gestione su música.
	Vídeos	Reproduce y gestione sus vídeos.
	Galería	Vea y gestione sus imágenes
	Mapas	Con conexión a una red vea su localización
	Lugares	Con conexión a internet vea los lugares de interés cercanos a su posición.
	Tienda Google	Descargue aplicaciones y juegos.
	Búsqueda	Encuentre en la red todo lo que necesite.
	Ajustes	Haga los ajustes en su sistema.

☆*Mantenga pulsada la tecla arrastrar para mover los iconos en el escritorio。*

☆pulse sobre la tecla para limpiar el escritorio.

10 Menú

En el escritorio con el botón de menú abra las funciones

y acceda fácilmente a los ajustes pulsando sobe las opciones en la pantalla.

11 Aplicaciones

Instalar aplicaciones:

☆*Una variedad de interesantes aplicaciones está disponibles en la red, sólo necesita buscar "aplicaciones para Android" en su navegador.*

Las aplicaciones descargas serán almacenadas en

, y podrá instalarlas fácilmente:

1. Copie la aplicación .apk en la tarjeta SD o dispositivo USB. Introduzca la tarjeta en el Tablet o conecte el cable USB.
2. Pulse sobre el icono

.
3. Elija

o para elegir la ubicación del archivo .apk
4. Toque sobre la aplicación e instalar.
   Una vez instalada la aplicación aparecerá con un icono en el escritorio.
5. Pulse sobre el icono para iniciar la aplicación o vuelva al menú.

Descargar aplicaciones de internet:

Descargue las aplicaciones desde internet de manera fácil y rápida.

1. Abra

para buscar la aplicación en internet.
2. Introduzca la dirección web y pulse sobre el link para iniciar la descarga de la aplicación.
3. Una vez finalizada la descarga, mantenga pulsada la aplicación, guardada en el historial de descargas, pulse para abrir e instalar.

Conexión a un PC y descargas de datos

1. Conecte el tablet con el PC a través del cable USB, esta parte en el PC y la conexión OTG en el tablet.
2. Una vez conectado se mostrará la imagen , elija

para iniciar y encienda el dispositivo USB para intercambiar archivos entre su PC y su tablet como sigue:

Desinstalar aplicación:

Siga estos pasos para desinstalar una aplicación Android

1. Pulse el botón menú→ ajustes → aplicaciones→ gestor de archivos
2. Elija la aplicación → **desinstalar**
3. Pulse SI para confirmar la operación.

12 Grabadora

Pulse sobre el icono para acceder a la siguiente pantalla:

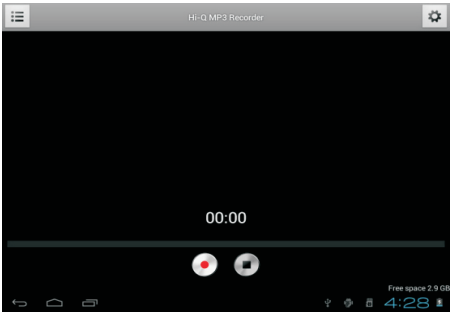

Pulse sobre para iniciar una grabación, y para detenerla, use para ver los archivos guardados por orden cronológico. Pulse sobre el que desea oír I use para acceder a los detalles del archivo.

13 Reloj

Pulse sobre el icono para acceder a la fecha y hora.

Alarma

Se pueden programar diferentes alarmas en el tablet.

☆ *Cuando el icono* *se muestra en el escritorio significa que al menos una alarma está programada.*

Añadir nueva alarma

1. Pulse sobre

.
2. En las opciones elija añadir nueva alarma.
3. Introduzca la hora deseada.

☆ *Si no se elige repetir la alarma será borrada una vez haya sonado.*

☆ *Haga clic de nuevo para programar otra alarma*

Parar alarma

Cuando la alarma suena una ventana con un reloj parpadea.

Si desea que vuelva a sonar en minutos pulse pausa.

Para cancelar pulse parar.

Activar Alarma.

Cuando la alarma ya se encuentra en repetición, por lo general necesita del usuario para suspenderla si el uso no se suprime:

En la pantalla del reloj pulse sobre el icono para suspender el uso de esta alarma.

1. Pulse para salir.

Editar alarma.

1. Pulse sobre

→y .
2. Entre en la parte que necesita una revisión y póngala a cero.

Borrar alarma

1. Pulse sobre

→y .
2. Abra la alarma que desea borrar.
3. Elija suprimir

Pulse sobre para volver a la pantalla anterior.

14 Descargar aplicaciones e instalar.

1. Pulse sobre el icono

.
2. El usuario puede visualizar las descargas disponibles para instalar en su PC.

15 Navegador

Use para abrir su navegador de internet.

Pulse sobre

para acceder：

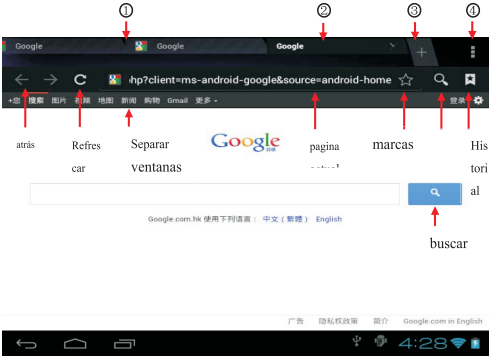

①：Páginas visitadas；②：Página actual；③：Añadir página；④：Menú

16 Calendario

Pulse sobre el icono para abrir la función.

Cuando el calendario es utilizado por primera vez, se necesita agregar una cuenta de Exchange. La cuenta de entrada, dirección de correo electrónico y contraseña. Haga clic en siguiente, de acuerdo con la configuración de la cuenta completa, después el calendario se puede utilizar.

Nuevos eventos

1. En la pantalla del calendario pulse sobre nuevos eventos para añadir una nueva cita.
2. Elija la fecha y hora de aviso así como un detalle de la cita.
3. Pulse fin.

☆*El olor gris en una fecha indica la actual.*

17 Cámara

Pulse para abrir la cámara, podrá ver el icono

Tomar fotos

1. Pulse para tomar una foto.
2. La imagen será guardada.
3. Pulse en la miniatura para mover al álbum o visualizar la imagen.
4. Pulsando volverá a la cámara.

5. Pulsando accederá a los ajustes.

Cámara de vídeo

1. Pulse para acceder al modo vídeo.
2. Toque para iniciar una grabación de vídeo y para detenerla.
3. El vídeo será guardado.
4. Pulse en la miniatura para visualizar el vídeo.
5. Pulse sobre atrás para volver a la cámara.
6. Use para salir de cámara y volver al escritorio.
7. Con acceda a los ajustes de vídeo.

Nota： Al pulsar cambiará entre la cámara frontal y la posterior en modo foto...

18 Calculadora

1. Pulse para abrir la función.
2. Introduzca los números y signos necesarios para efectuar la operación.
3. Pulse borrar para vaciar la pantalla.

19 E-mail

☆ *Admite cuentas POP3 y SMTP.*

Añadir cuentas

Puede añadir una o varias cuentas de correo para su uso.

1. Pulse sobre el icono

para abrir el programa.
2. En la pantalla de cuentas pulse siguiente.
3. Pulse opciones de cuenta, → introducir dirección.
4. En las opciones de contraseña introduzca las contraseñas de sus cuentas.
5. Pulse fin.

Configuración manual (opcional): configuración del servidor de lata llena en el proveedor de correo electrónico (como gmail.com) de acuerdo a su cuenta de correo electrónico Si tiene que revisar la configuración del servidor, puede hacer clic en "Configuración manual" para hacer algún cambio.

6. Hagan clic en "paso siguiente".
7. Opcional: Ingrese el nombre de cuenta.
8. Muestra el nombre de cuenta a la hora de envío y recepción de correo electrónico, haga clic en "Finalizar"

☆ ***Si después de estos ajustes sigue sin poder acceder a su cuenta de correo, contacte con su proveedor de servicios para confirmar el tipo de conexión POP o SMTP.***

Buzón de entrada

1. Pulse sobre el icono de correo

2. Si ya ha agregado una cuenta esta se abrirá automáticamente, si tiene varias deberá elegir una de la lista.
3. Pulse sobre la cuenta que desea abrir y a continuación en buzón de entrada.

Abrir correo

1. En el buzón de entrada pulse sobre el correo que desea abrir.
2. Si contiene un archivo adjunto elija la aplicación para abrirlo o guárdelo en la tarjeta de memoria.
3. Para responder pulse sobre responder o responder a todos.
4. Pulse sobre borrar para eliminar el mensaje.

Crear correo

1. Toque el icono crear en la pantalla.
2. Elija un contacto de su agenda o indique la dirección.
3. Si lo necesita acceda al menú para añadir un archivo.
3. Una vez el correo creado haga clic en enviar.

Editar una cuenta de correo

1. Pulse en

para abrir el programa.

2 Elija ajustes de cuenta en el menú.

3. Una vez realizados los ajustes pulse sobre

Borrar una cuenta de correo

Si dispone de varias cuentas configuradas, y borra la predeterminada la siguiente de la lista pasará a serla automáticamente.

1. Pulse sobre el icono

para abrir el programa.

2. En la bandeja de entrada pulse menú y cuentas.

3. Abra la cuenta que desea borrar.

4. Pulse la opción de borrar cuenta.

5. Pulse confirmar.

Definir una cuenta por defecto

Si usted dispone de varias cuentas puede elegir una de ellas para que sea la predeterminada por defecto.

1. Pulse sobre el icono

para abrir el programa.

2 En la bandeja de entrada pulse menú y cuentas.

3. Abra la cuenta que desea predeterminar.

☆*Si dispone de varias cuentas configuradas, y borra la predeterminada la siguiente de la lista pasará a serla automáticamente.*

20 Gestor de archivos

Pulse sobre el icono para abrir el gestor de archivos y poder acceder al contenido de la memoria del Tablet, la tarjeta de memoria o el dispositivo USB.

Esta función contiene las siguientes opciones:

Ajustes de memoria interna

Su tarjeta SD

Unidad USB)

Volver a la carpeta anterior

Nueva carpeta

Ajustes de archivos

Imágenes

Copiar archivos del PC al Tablet

Usted puede copiar archivos en el gestor de archivos de un dispositivo de almacenamiento externo al ordenador. Si necesita copiar los archivos en su Tablet debe copiarlos primero en la tarjeta TF o el dispositivo USB.

La carpeta de almacenamiento del disco interno se llama "Disco Local", la tarjeta SD "tarjeta SD", y dispositivo USB de almacenamiento llamado "disco U".

Estas son las instrucciones para copiar archivos desde la tarjeta SD y el dispositivo de almacenamiento USB al tablet. Usted podría utilizar el mismo método para copiar los archivos a la tarjeta SD o un dispositivo USB de almacenamiento, conecte su dispositivo de almacenamiento al tablet, a continuación, inicie la copia de archivos a la carpeta que usted desee.

1.Pulse o para buscar los archivos que desea copiar.

2.Marque el archivo que desea copiar y pulse la opción copiar.

3.Pulse para volver a la memoria → elija la carpeta de destino → opción pegar.

Borrar archivos

Pulse sobre el archivo que desea borrar, elija la opción borrar y pulse aceptar.

21. Música

Admite formatos de audio de: MP2, MP3, WAV, WMA, and AAC

Reproducir musical

1. Pulse para abrir el reproductor.

2. Elija el álbum, carpeta o lista de reproducción que desea abrir.

3. Use los iconos de siguiente tema, anterior o pausar .

4. Para volver al escritorio durante la reproducción pulse sobre los iconos o .

Para volver a la pantalla del reproductor pulse sobre la pestaña que aparecerá en la parte inferior derecha.

22 Vídeo

☆ **Admite formatos de imagen en:** *AVI*、*WMV*、*RM*、*RMVB*、 *3GP*、*MKV*、*MP4*、*ASF*、*VOB*、*MPG*、*MOV hasta 1080P HD-Definición*

1. Pulse sobre para abrir el reproductor.

2. Elija el vídeo que desea abrir.
3. Pulse sobre la pantalla para efectuar los ajustes de sonido, imagen y reproducción.
4. Pulse el icono para volver a la pantalla del reproductor.

23 Galería de imágenes

JPEG、*BMP*、*GIF*、*PNG*

1. Pulse sobre el icono para abrir la galería.

2. Elija la carpeta que contenga las imágenes.
3. Pulse la tecla atrás para volver a la pantalla de visualización.
4. Pulse para acceder a una presentación en modo normal, clásico, pasión o romántico.
5. Pulse sobre para ajustar el color de sus imágenes.
6. Pulse para ordenar por fecha.
7. Pulse para ordenar por nombre.

Borrar imágenes y ajustes de presentación de fondo

1. elección múltiple
2. borrar
3. ajustes de presentación de fondo

24 MAPAS

Para utilizar esta función necesita estar conectado a una red, una vez conectado pulse sobre el icono

, se abrirá un mapa mostrando su posición; una vez abierta podrá buscar la localización que desee.

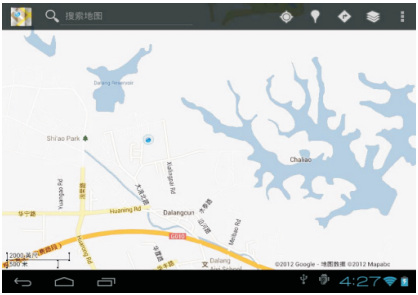

25 Búsqueda local

Funciones similares a las de los mapas, pero que le permiten almacenar información sobre puntos de interés.

26 Tienda Android

Para abrir esta opción necesita descargar la aplicación.

La primera vez que abra esta opción se le pedirá una cuenta de GMAIL para acceder, si no dispone de ninguna cree una en http://gmail.google.com , con esta aplicación podrá descargar múltiples aplicaciones en su Tablet Bravus.

27 Ajustes

Wi-Fi y red	Wi-Fi	Abrir Wi-Fi
	Ajustes de Wi-Fi	Ajuste y gestione sus puntos de acceso
	Ajustes de vuelo	Desactive las conexiones
	Ajustes de red 3G	Ajuste su red 3G
Internet		Configure su conexión
Ajustes de red		Configure su cuenta de red introduciendo su nombre de usuario y contraseña.
USB	Nombre de memoria	Nombre su volumen USB
	ADB	Configure su USB para ADB
Sonido	Silenciar	Pueden anularse todos los sonidos menos los de la alarma.
	Volumen	Ajuste el volumen de sus funciones deslizando la barra y pulsando aceptar.
	Tono de aviso	Seleccione su tono de aviso.
	Tono de difusión	Elija el sonido de uso en sus pantallas.
	Bloqueo de pantalla	Esta queda bloqueada al reproducir sonidos.
Imagen	Brillo	Deslice la barra para ajustar el brillo de la pantalla y pulse aceptar.
	Rotación automática de la pantalla	Le permite a la imagen girar vertical o horizontalmente siguiendo el movimiento del dispositivo.
	Tiempo de espera	Ajusta el tiempo en que la pantalla se apaga.
	Tiempo de bloqueo	Ajusta el tiempo en que la pantalla se bloquea.
	Bloqueo de pantalla	Use u código pin o contraseña para bloquearla.
	Ocultar contraseña	Oculta los caracteres mientras se introducen.

Seguridad	Elegir dispositivo	Añade o borra dispositivos desde el gestor.
	Pedir certificados de seguridad	Se pedirán certificados de las aplicaciones o páginas abiertas.
	Instalar desde la tarjeta TF	Instala un certificado encriptado desde la tarjeta TF
	Guardar contraseñas	Ajuste o consulte las contraseñas guardadas
	Borrar contraseñas	Borra toda la información de seguridad almacenada
Aplicaciones	Fuentes desconocidas	Permite instalar aplicaciones que no sean de la tienda Android
	Gestión de aplicaciones	Gestione o borre sus aplicaciones.
	Activas	Consulte y controle las aplicaciones abiertas
	Actualizaciones	Ajuste las actualizaciones de sus aplicaciones
Privacidad	Restaurar valores de fábrica	Use esta opción para restaurar los valores de fábrica de su dispositivo, use para cancelar. Atención Esto borrará toda la información menos: ~ El sistema y aplicaciones de origen ~ Los archivos guardados en la tarjeta (música, vídeo…)
Memoria interna y tarjeta TF	Capacidad total y disponible	La indica al insertar la tarjeta TF
	Desinstala la tarjeta TF	Elija la opción al insertar la tarjeta
	Formatear tarjeta	Formatea el contenido
Idioma del teclado	Elegir idioma	Elija el idioma de su país o región
	Teclado Android	Ajustes de teclado
	Usar diccionarios	Ayúdese de los diccionarios para confeccionar textos o mensajes.
Fecha y hora	Fecha	Ajustes de fecha
	Elegir zona horaria	Ajustes de zona horaria
	Hora	Ajustes de hora
	Formato de hora	Seleccione entre los formatos de 12 o 24 horas
	Formato de fecha	Seleccione entre varios formatos de fecha
Acerca de su Tablet		Consulte el estado de sus mensajes, potencia, información legal, modelo, versión de Android, de Kernel y número de modelo.
Calibración del teclado táctil		Sirve a realizar una nueva calibración de su pantalla táctil en caso de disfuncionamiento.

Woxter Tablet PC

(Android4.0)

manual de usuario

user guide

www.woxter.com

Contents

Contents 1
Tips 2
2. Power switch usage 3
3. Touch screen 3
4. Adapter cable 3
5. TF card usage 4
6. Getting started 4
- **Charging the device** 4
- **Battery management** 4
- **Start-up** 4
- **Wi-Fi network settings** 5

7. Desktop 6
8. Locking desktop 7
9. Programs 8
10. Desktop menu function 10
11. Program Manager 10
- **Installing programs** 10
- **Downloading applications from Internet directly** 10
- **Uninstalling the application** 11

12. Sound recorder 11
13. Clock 12
- **Alarm clock** 12

14. Downloads 13
15. Browser 14
16. Calendar 14
- **New event** 15

17. Camera 15
- **Taking pictures** 15
- **Recording video** 15

18. Calculator 16
19. E-mail 16
20. File Manager 18
- **Copying files between PC and the device** 19
- **Deleting files** 19

21. My music 19
- **Playing music** 19

22. My video 20
23. Gallery 21

24. Maps.....21
25. Local search.....22
26. E-market.....22
27. Settings.....23
Appendix: Optional accessory and model.....25

Tips

When you use this device, please follow the safety notice below to prevent fire, electric shock and injury.

- Keep the device away from rain and moisture.
- Keep the device away from direct sunlight and heat source.
- Protect the power cord. When connect the power cord, do not step onto it or place any object on it, which may cause extrusion. Protect the connector of the power cord connected devices specially.
- Please use the original power adapter for charging. Nonconforming chargers may cause harms.
- Do not disassemble the shell or repair it without authorization.

Cleaning

Handle the screen gently. To clear the fingerprints or dust on the screen, use soft cloth dedicated for camera lens instead of gauze.

2. Power switch usage

Turning on: Press and hold the power switch for five seconds
Turning off: Press and hold the power switch for five seconds – Tap Turn Off – Tap OK
Screen locking/unlocking: Press the power switch to lock/unlock the screen.
Force shut-down: If the device doesn't have response, press the Reset key to restart the device.
Note: Do not force shut down the device unless necessary. Under normal condition, please follow the normal procedure to turn off the device.
Reset key: Press the Reset key to restart the device.

3. Touch screen

The operation of touch screen is fast, easy and convenient.
The User Instructions guide you to operate the touch screen as follows:
Tap: Tap to select an icon or option.
Tap and hold: Tap and hold an icon to drag it to the desktop.
Drag and drop: Drag and drop on the desktop to switch among different interfaces.
☆ *To avoid scratching or breaking the screen, do not put any object on it.*

4. Adapter cable

To use USB storage device, it is required to connect the adapter cable and then connect to PC.

OTG cable

USB cable

USB flash drive

Connect one end of the OTG cable to the flash drive and the other end to the USB OTG interface of the device. You can use the flash drive when it is ready.

☆ *Do not insert/remove the USB flash drive frequently, or else it may damage the flash drive.*

5. TF card usage

☆ *The device supports memory card up to 32GB.*

Insert the memory card into the slot, press with fingers to clamp it; the screen will show **Preparing SD card**, and the TF card is ready for use when the characters disappear. You can operate when the card is ready.

Removing TF card

Close all programs or files opened from the memory card. Tap

→ TF card and device memory → Remove TF card. Press the card and it will eject.

☆ *Do not insert/remove the memory card repeatedly, or else it may damage the card.*

☆ *Please use qualified memory card to avoid incompatibility.*

6. Getting started

Charging the device

Connect one end of the power adapter to the socket and the other end to the power jack to charge the device.

During charging, the battery symbol is ; after charged, the battery symbol turns into .

☆ *You can use USB cable to charge the device.*

☆ *You can use the device while charging; however, it will extend the charging time.*

Battery management

The battery electricity isn't full when it is packed. It is recommended to charge at least four hours before using the device.

The charging time and discharging time of the battery are limited. However, you can try the following measures to extend the life of the battery.

- Use the device at least once every week.
- Charge the battery regularly.
- Do not keep the battery too low for long time.
- Always keep the device and battery away from heat source.

Start-up

Press and hold the power switch for five seconds.

Wi-Fi network settings

Since many functions require Wi-Fi connection, please configure the Wi-Fi network before operation.

1. Click

→ **Wireless and network.**

2. Select to turn on Wi-Fi.

The device will automatically scan and list all available Wi-Fi networks. If the Wi-Fi connection has icon, you need to enter the valid password.

3. Tap a Wi-Fi connection → if password is required, please enter the valid password → tap Connect, and t icon appears on the desktop after connecting to Wi-Fi network.

4. Tap to return to the desktop.

☆ *If you set to hide Wi-Fi, it won't be scanned automatically. Please tap Add Wi-Fi Network, and then enter corresponding information to add the Wi-Fi.*

3G network settings

1. To connect to 3G network, please select the 3G Doogle that the device supports. The device only supports external USB 3G Doogles. The 3G support list can be found in

→ **Wireless and network → More → 3G support.**

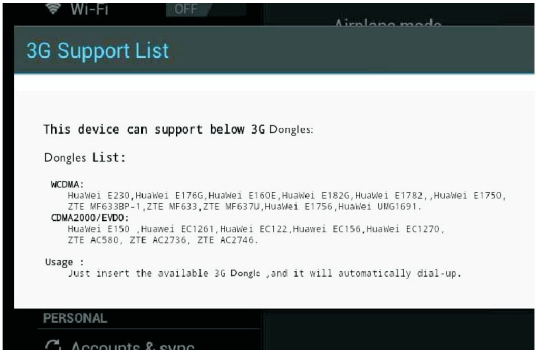

2. After installing the SIM card into the 3G NIC, install the 3G NIC to the USB OTG cable and then connect to the device;

3. After connecting to the 3G NIC, tap

→ **Wireless and network** → **More** → **Mobile network** to perform 3G Internet access settings.

4. Turn on the mobile network and select **Enabled data flow** → **Data roaming,** then select **APN**, enter and select **Menu key**: create new APN for Internet access. For China Unicom 3G Internet access, please set as follows:

Name: 3GWAP / APN: 3gnet / **Proxy:** Not set/ **Port:** 80 / **Username:** Not set/ **Password:** Not set / **Server:** Not set / **MMSC**: Not set / **MMC proxy:** Not set / **MMC port:** Not set / **MCC**: 460 / **MNC**: 01/ **Authentication type:** Not set / **APN type:** Not set / **APN type:** Not set

Connect to 3G network after setting symbol appears on the screen connecting to 3G network.

If the symbol is grey, it is scanning the network; blue symbol indicates that the network is connected, and the symbol indicates data transmitting.

7. Desktop

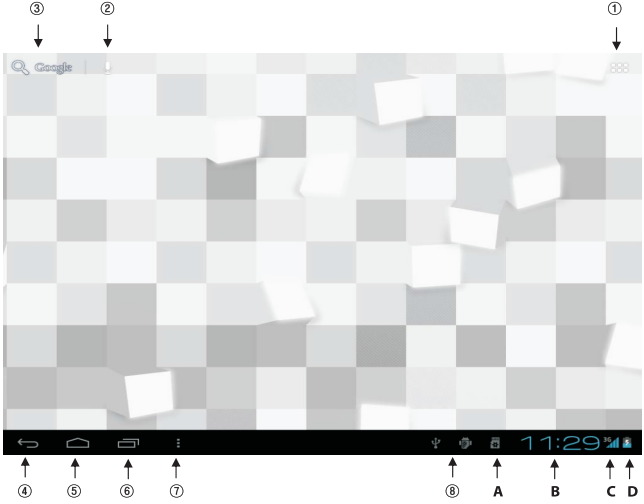

①: Tap to view all applications
②: Voice search shortcut
③: Browser shortcut
④: Return to current operation
⑤: Return to desktop directly from the program interface
⑥: Multipage task selection key
⑦: Menu function shortcut
⑧: USB connection symbol

A: TF card connection status
B: Current time
C: 3G/WIFI connection signal symbol
D: Battery status

☆ *Tap any application icon to run it.*
☆ *Tap and hold the icon to drag and drop to other position on the screen.*
☆ *Tap and hold the icon to drag and drop to*

to delete from the desktop.

8. Locking desktop

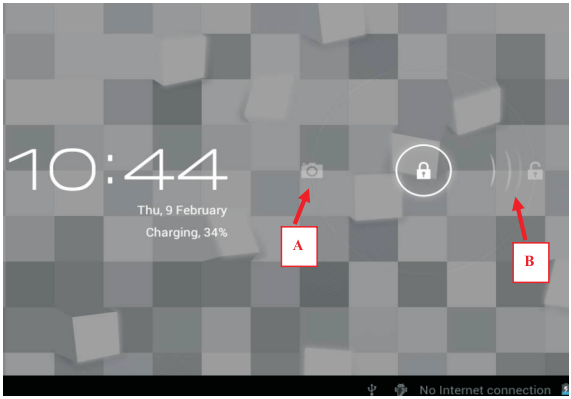

If the PC won't be used for a long time, or the power switch is tapped, the device enters standby state. The standby has two states. One is deep-sleep standby, in which the screen is

turned off; the other is light standby after pressing the power switch. The picture shows the default light standby state. Tap and hold the unlocking switch , and the A, B symbols as shown in the picture appear; point A is the camera icon and point B is the unlocking icon. The system will prompt about the path of unlocking. The ripple at point B in the picture is the path of the prompt. Tap and drag the unlocking switch to point B to unlock the screen, tap and drag the unlocking switch to point A to activate the camera function.

9. Programs

	Recorder	Record external sound
	Clock	Display time and set the clock
	Downloads	Install the downloaded applications quickly
	Browser	Connect to Internet browser
	Calendar	Set the calendar of the event
	Camera	Take pictures
	Calculator	Do simple arithmetic

	E-mail	Send and receive e-mail with existing e-mail address
	File Manager	View and manage files and programs. Install Android applications and back up files in SD card.
	My Music	Play and manage music files
	My Video	Play and manage video files
	Gallery	Browse and manage picture files
	Map	Connect to the Internet and view current position in the map
	Local Search	Connect to the Internet and view the information of the facilities near current position
	E-market	Log in and download system application
	Search	Enter the desired data directly
	Settings	Perform personalized setting

☆ *Tap and hold the icon to drag and drop to other position on the screen.*

☆ *Tap and hold the icon to drag and drop to* 

to delete from the desktop.

10. Desktop menu function

On desktop, tap the Menu key to show the menu list 

and perform the operation. At the same time, set common programs on desktop by tapping and holding the program icon to move to the desktop;

11. Program Manager

Installing programs

☆ *It is possible to download interesting and free Android applications. You just need to start the browser and search for "Android applications".*

You can install the purchased or downloaded Android applications quickly through

.

1. Copy desired .apk files to SD card or USB storage device → insert the card into the device or connect USB flash drive to the device.
2. Tap the file manager icon

3. Tap

or and find the folder that saves .apk files.
4. Select an .apk file → **Install**. After the application is installed, the icon will appear in the interface that shows all applications.
5. Tap to run the application directly, or tap OK to return to the File Manager interface.

Downloading applications from Internet directly

You can download Android applications from the Internet directly, and install in the device quickly.

1. Click the

icon to connect to the Internet.
2. Enter the URL and tap the download link of desired application.
3. After downloading, tap and hold the downloaded files (in download log interface), → click Open → Install.

Connecting to PC to save files

1. Connect the tablet PC to PC and the tablet PC can be used as mobile storage device; to connect to PC, connect one end of the USB cable to the USB OTG interface of the tablet PC and the other end to the USB interface of PC;

2. After connected, the tablet PC will prompt

, click the icon and then select Turn on USB storage to transmit data between PC and tablet PC, as shown below:

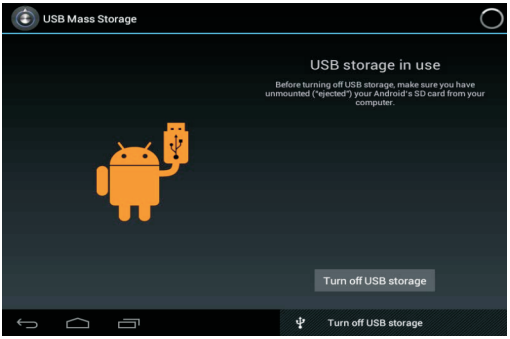

Uninstalling the application

You can uninstall the Android application quickly.

1. Tap Menu key → **Settings** → **Application** → **Manage applications.**
2. Tap an application → **Uninstall.**
3. Tap OK to uninstall.

12. Sound recorder

Click the sound recorder icon

.

The following interface appears

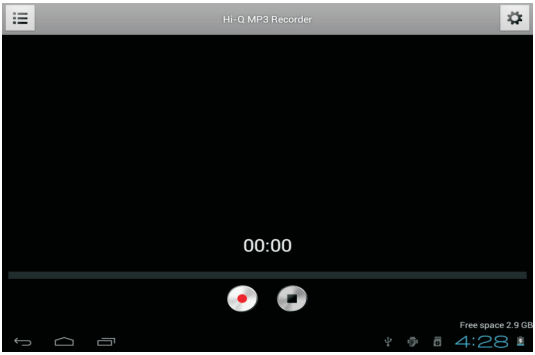

Tap to start recording, tap to stop the recording, tap to view the recording files, which will be named by time; select a recording file to play; tap to perform sound recording setting according to the prompt.

13. Clock

Tap the clock icon to view current date and time.

Alarm clock

You can set several alarm clocks at the same time.

☆ *When the icon* *appears in the upper status bar of the screen, at least one alarm clock is activated.*

Adding alarm clock

1. Tap the clock icon .
2. Press the Menu key → Add alarm clock.
3. Set the alarm clock accordingly.

☆ *If you don't select Repeat, the alarm clock will be deleted automatically after the alarm time.*

4. Tap Enable alarm clock.
5. Tap OK.

Turning off alarm prompt

When the alarm time is out, a window with the name of alarm clock will pop up.

If you want to repeat the alarm clock in 10 minutes, tap Snooze.

Tap Cancel to stop the prompt.

Enabling alarm clock

If you select Repeat in the settings, the alarm clock will be deactivated temporarily, but won't be deleted.

1. In the alarm clock interface, tap the icon after desired alarm clock.
2. Tap to re-activate the alarm clock.

Editing alarm clock

1. Tap the clock icon → tap .
2. Tap a desired alarm clock → edit.

Deleting alarm clock

1. Tap the clock icon → tap .
2. Tap desired alarm clock and enter.
3. Tap Delete.

Tap to return to the desktop.

14. Downloads

1. Tap the download icon
2. View currently downloaded applications in PC, select and install.

15. Browser

You can connect to the Internet through the browser.

Tap the browser icon

on desktop to access the Internet:

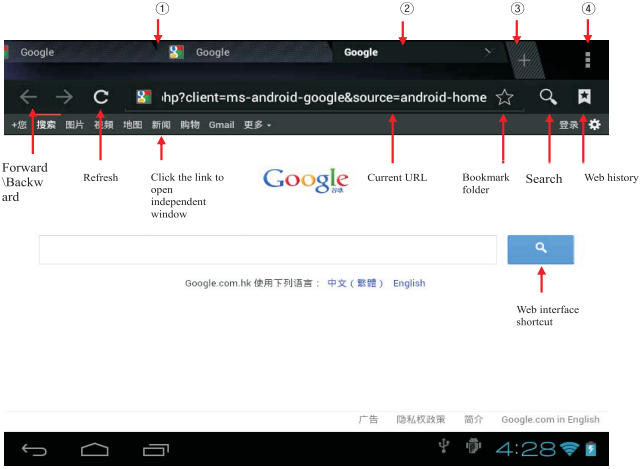

①: Previous web; select to view; ②: Current web; ③: Add web; ④: Menu key

16. Calendar

Tap the calendar icon

.

When the calendar is used for the first time, you need to add an Exchange account. Enter the e-mail address and password of the account, tap Next and follow the prompt the finish the account setting, and then the calendar is available.

New event

1. In the Calendar interface, tap the date you want to create an event.
2. Select the time → enter the details in each field.
3. Tap OK.
4. Tap the Menu key to select desired calendar interface.

☆ *The dates displayed in grey have events.*

17. Camera

Tap the camera icon

to turn on the camera and the interface appears.

Taking pictures

1. In the camera interface, tap to take pictures.
2. The pictures will be saved automatically.
3. Tap the thumbnail of the picture to view the original in Gallery.
4. Press the Back key to return to the camera.
5. Tap the icon to perform camera setting.

Recording video

1. Tap to switch to the video mode, in which you can record video.
2. Tap to start recording, and tap to stop recording.
3. The video files will be saved automatically.
4. Tap the video thumbnail to play the video.

5. Press the Back key to return to the camera.
6. Tap to switch to camera interface.
7. Press the key to perform settings for video recording.

Note: You can tap to switch between front camera and rear camera to take pictures and record video.

18. Calculator

1. Tap the calculator icon
2. Tap the figures and operators to calculate.
3. Tap Clear to delete one, or tap and hold Clear to clear all the results.

19. E-mail

☆*Support POP3 and SMTP accounts.*

Adding e-mail account

You can enter one or several desired e-mail addresses on the device.

1. Tap the e-mail icon
2. In Your account interface, tap Next.
3. In e-mail address option, enter your e-mail address.
4. In password option, → enter your e-mail password.
5. Tap OK.
6. Manual setting (optional): The server fills the supplier (i.e. gmail.com) automatically according to your e-mail account. However, if you need to change the server setting, click Manual setting to make necessary change.
7. Tap Next.

8. Optional: Enter the account name.
9. Enter the name of the message → Tap OK.

☆ *After setting, if you can't access a free e-mail account, please check with your e-mail service provider whether their server support POP and SMTP protocol.*

Inbox

1. Tap the e-mail icon

.
2. If you only set one e-mail account, it will be opened directly. If you have set several accounts the account list will be displayed.
3. Tap desired e-mail account → tap Inbox.

Opening e-mail

1. In the Inbox interface, tap and open an e-mail.
2. For attachment, tap Open to start respective application, or tap Save to save the attachment to SD card.
3. To Reply, tap Reply or Reply to all.
   a) Write the message you want to send.
   b) Tap Send to send the e-mail immediately; tap Drafts to save but do not send the e-mail, or delete directly but do not save or send.
4. To delete the e-mail directly, tap Delete.

Writing new e-mail

1. In Inbox interface, press the Menu key → **Write.**
2. Tap Send to, and then enter the address of the recipient.
3. Or if you want to send a cc or bcc, press the Menu key → Add cc and bcc, and enter the e-mail addresses of the recipients.
4. Enter desired subject in the title bar of the e-mail.
5. Tap Write option to enter your personal information.
6. If necessary, press the Menu key → tap Add attachment to add the attachment file.
7. After writing, press the Menu key → tap Send.

Editing e-mail account

1. Tap the e-mail icon

.
2. In the Inbox interface, press the Menu key → tap Account setting.
3. Set your e-mail account accordingly.
4. Tap to return to the Inbox interface.

Deleting e-mail account

☆ *If you have several accounts and have deleted the default account, the next e-mail account in the list will be set to default automatically.*

1. Tap the e-mail icon

2. In the Inbox interface, press the Menu key → tap Account.
3. Tap and hold the account you want to delete.
4. In the popup Account option window, tap Delete account.
5. Tap OK to confirm the operation.

Setting default e-mail account

You should always have a default account. Therefore, if you have several e-mail accounts, you can set anyone to default.

1. Tap the e-mail icon

2. In the Inbox interface, press the Menu key tap → Account setting.
3. Tap Default account to select it.

If you delete the default account, the next e-mail account in the list will be set to default automatically.

20. File Manager

Tap the file manager icon

to view the files in all storage devices (*internal memory, SD card, USB storage*), and install Android applications to the device quickly.
The icons in the top of the screen have the following functions:

Internal memory

Your memory card

USB flash drive (needs adapter cable)

Back to previous folder

Create new folder

Set file content

Picture files

Copying files between PC and the device

You can copy files between external storage device, internal memory and the PC through File Manager. To copy files to the device, it is required to copy to SD card or USB storage device first.

☆ *The folder of the internal memory is "LocalDisk", the memory card is "sdcard", and the USB storage device is "udisk".*

☆ *To copy files from SD card or USB storage to the device, you can copy the files to SD card or USB storage in the same way, then connect the storage device to PC and copy the files to your folder.*

1. Tap or to show the files in your storage device.
2. Tap and hold the desired file or folder and tap Copy.
3. Tap the icon to return to the internal memory, tap the target folder and then tap Paste.

Deleting files

Tap and hold the file or folder, tap Delete and then tap OK to delete.

21. My music

☆ *The compatible audio formats are: MP3, WMA, OGG, FLAC, WAV, ACC*

Playing music

1. Tap My Music icon

2. Select desired music to play from the music/album/artist/playing list.
3. Tap Previous→ Pause → Next icon for operation.

4. To return to previous interface while playing music, tap or to return to the desktop.

Press the Menu key for music operation, as in the interface below:

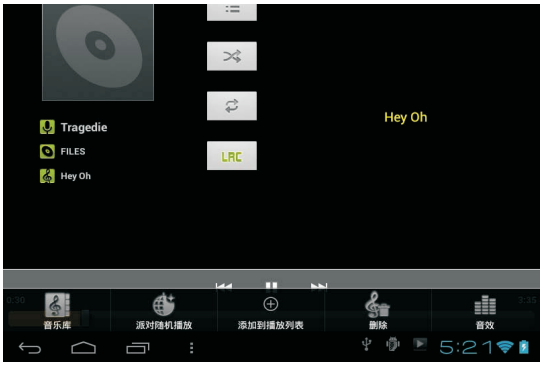

22. My video

☆ *AVI, WMV, RM, RMVB, 3GP, MKV, MP4, ASF, VOB, MPG, MOV up to 1080P HD-Definition*

Playing video

1. Tap My Video icon

2. Select desired video to play from the all/contents/my favorite/custom list.
3. Tap on the screen to adjust the video (including volume, pause/play, brightness, etc.)
4. Press the Back key or tap the icon to return to My Video interface.

23. Gallery

☆ *The compatible picture formats are: JPEG, BMP, GIF, PNG*

1. Tap the gallery icon and then tap a picture group.
2. Tap a picture to browse.
3. Press the Back key to return to the picture group interface.
4. Tap the icon to play the lantern slides. The lantern slide modes include common, classic, dynamic, sweet, warm and party.
5. Tap to arrange the pictures by color
6. Tap to arrange the pictures by time.
7. Tap to arrange the pictures by name.

Enter a picture group, tap and hold a picture to enter multiple choices state, in which you can delete pictures and switch dynamic wallpaper

1. -- Multiple choices
2. -- Delete
3. -- Dynamic wallpaper switch



24. Maps

☆ *This function requires Internet connection.*

After connecting to the Internet, tap the map icon to open your current position automatically; as shown below, you can search desired information;

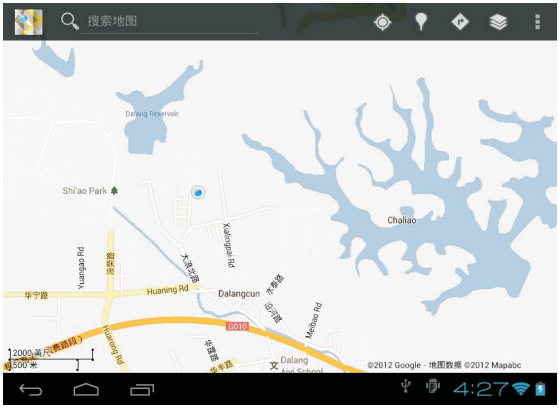

25. Local search

☆ *Similar to the map function, it can save a large number of environmental information*

26. E-market

Turn on E-market to query and download applications.

When E-market is run for the first time, the system will ask to log in with GMAIL account (if you don't have a GMAIL account, please apply at http://gmail.google.com).

After downloading, install the applications.

27. Settings

Wireless and network	**Wi-Fi**	Turn on Wi-Fi
	Wi-Fi settings	Set and manage wireless access point
	Flight mode	Turn off wireless connection
	3G network settings	Set 3G network
Wired network		Configure wired network
Dial-up setting		Access the Internet through ADSL dial-up. Enter the username and password to connect
USB	**Mass storage**	Configure USB to mass storage
	ADB	Configure USB to ADB
Sound	**Silent mode**	All sounds are disabled except media and alarm clock
	Volume	Adjust the volume of media, alarm clock and notification by tapping and dragging the slider , and then tapping OK
	Notification ringtone	Select desired notification ringtone
	Audible selection	Play sound when making screen selection
	Screen lock sounds	Play sound when locking and unlocking the screen
Display	**Brightness**	Adjust the brightness of the screen by tapping and dragging the slider , and then tapping OK
	Auto-rotate screen	Switch orientation automatically when rotating the device
	Screen time-out	Adjust the delay before the screen automatically turns off
	System hibernate	Adjust the delay before the system automatically hibernates
Security	**Set up screen lock**	Lock screen with a pattern, PIN, or password
	Visible passwords	Show password as you type
	Select device administrators	Add or remove device administrators
	Use secure credentials	Allow applications to access secure certifications and other credentials
	Install from USB	Install encrypted certificates from USB storage

	storage	
	Set password	Set or change the credential storage password
	Clear storage	Clear credential storage of all contents and reset its password.
Application	**Unknown sources**	Allow installation of non-Market applications
	Manage applications	Manage and remove installed applications
	Running services	View and control currently running service
	Development	Set options for application development
Privacy	**Factory data reset**	Tap to clear all data in your device. Tap Reset to reset the device, or tap to cancel and return to previous screen **Warning!** This will erase all data from your device's internal storage, including: ~ Your Google account ~ System and application data and settings ~ Downloaded applications The following won't be erased: ~ Current system software and bundled applications ~ TF files, such as music and photos
TF card and storage	**Total space, available space**	Display when TF card is inserted
	Unmount TF card	Unmount TF card to safely remove it
	Format TF card	Format (erase) TF card
Language and keypad	**Select language**	Select corresponding language according to your location
	Android keypad	Screen keypad setting
	User dictionary	Add words to user dictionary
Date and time	**Set date**	Set the date
	Select time zone	Select time zone.
	Set time	Set the time
	Use 24-hour format	User 24-hour format or 12-hour format
	Select date format	Select date format
About device		View status, battery usage, legal information, model number, Android version, kernel version and build version

Appendix: Optional accessory and model

Accessory	Model	
3G Wireless Modem	TD-SCDMA	
	WCDMA	huawei E230, E176G, E160E, E182G, E1782, E1750
		ZTE MF633BP-1, MF633, MF637U.
	EVDO	huawei E150, EC1231, EC122, EC156 EC1270,
		ZTE AC580, ZTE AC2736, AC2746.